


# INSTALLATION GUIDE



## XT SERIES™ PANELS

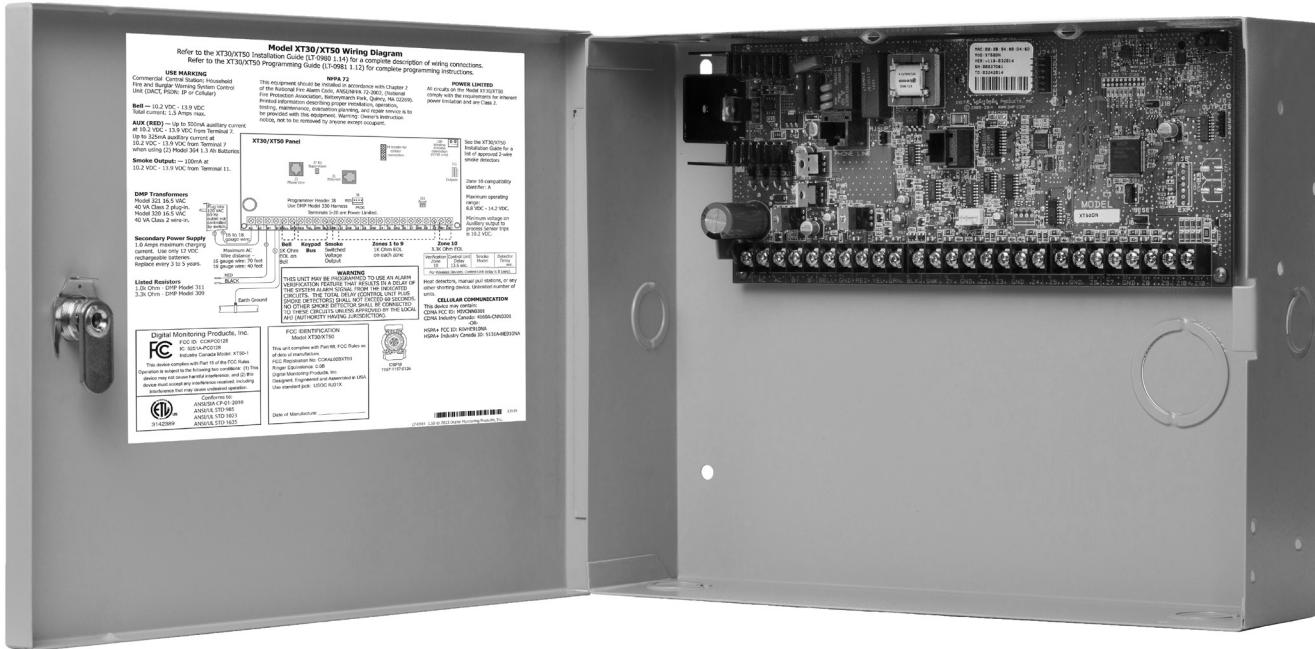

# **MODEL XT30/XT50**

## **XT SERIES™**

### **INSTALLATION GUIDE**

#### **FCC NOTICE**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device has been designed to operate with the 1100 Series antenna listed in the Accessory Devices section, and having a maximum gain of 1.8 dB. Antennas not included in this list or having a gain greater than 1.8 dB are strictly prohibited for use with this device. The required antenna impedance is 50 ohms.

If necessary, the installer should consult the dealer or an experienced radio/television technician for additional suggestions. The installer may find the following booklet, prepared by the Federal Communications Commission, helpful:

"How to Identify and Resolve Radio-TV Interference Problems."

This booklet is available from the U.S. Government Printing Office, Washington D.C. 20402

Stock No. 004-000-00345-4

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

#### **Industry Canada Information**

This device complies with Industry Canada Licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

© 2016 Digital Monitoring Products, Inc.

Information furnished by DMP is believed to be accurate and reliable.

This information is subject to change without notice.

**Panel Specifications**

1.1	Power Supply .....	1
1.2	Communication.....	1
1.3	Panel Zones.....	1
1.4	Keypads/Expansion .....	1
1.5	Number of Zones .....	1
1.6	Outputs.....	1
1.7	Enclosure Specifications .....	1

**Introduction**

2.1	System Configurations.....	2
2.2	Caution Notes.....	2
2.3	Compliance Instructions .....	2

**System Components**

3.1	Wiring Diagram.....	2
3.2	Lightning Protection .....	2
3.3	Accessory Devices.....	3
3.4	XT30/XT50 Wiring Diagram .....	4

**Installation**

4.1	Mounting the Enclosure.....	5
4.2	Mounting Keypads .....	6
4.3	Installation Specifications .....	6

**Primary Power Supply**

5.1	AC terminals 1 and 2.....	6
5.2	Transformer Types .....	6
5.3	Power LED .....	6

**Secondary Power Supply**

6.1	Battery Terminals 3 and 4 .....	7
6.2	Earth Ground.....	7
6.3	Replacement Period .....	7
6.4	Discharge/Recharge .....	7
6.5	Battery Supervision .....	7
6.6	XT30/XT50 Power Requirements .....	7
6.7	XT30/XT50 Standby Battery Calculations .....	8

**Bell Output**

7.1	Terminals 5 and 6 .....	9
-----	-------------------------	---

**Keypad Data Bus**

8.1	Description .....	9
8.2	Terminal 7 - RED.....	9
8.3	Terminal 8 - YELLOW .....	9
8.4	Terminal 9 - GREEN .....	9
8.5	Terminal 10 - BLACK .....	9
8.6	Keypad Bus LEDs.....	9
8.7	Programming (PROG) Connection .....	9
8.8	Keypad Addressing.....	9
8.9	Overcurrent OVC LED.....	10

**Smoke and Glassbreak Detector Output**

9.1	Terminal 11 .....	10
-----	-------------------	----

**Burglary Zones**

10.1	Description .....	10
10.2	Operational Parameters .....	10
10.3	Zone Response Time.....	11
10.4	Keypad Arming Zone .....	11

## TABLE OF CONTENTS

<b>Powered Zone for 2-Wire Smoke Detectors</b>	
11.1    Terminals 25 and 26.....	11
<b>Annunciator Outputs</b>	
12.1    Description.....	11
12.2    Harness Wiring .....	11
12.3    Model 860 Relay Module.....	11
<b>PHONE LINE RJ Connector</b>	
13.1    Description.....	12
13.2    FCC Registration .....	12
13.3    Notification.....	12
<b>ETHERNET Connector</b>	
14.1    Description.....	12
14.2    Ethernet LEDs .....	12
<b>RESET Header</b>	
15.1    Description.....	13
<b>Flash LOAD Jumper</b>	
16.1    Description.....	13
<b>Cellular Connections</b>	
17.1    Cellular .....	14
<b>Wi-Fi Connection</b>	
18.1    Wi-Fi.....	14
<b>On-Board 1100 Series Wireless Antenna Connection</b>	
19.1    Wireless Antenna .....	15
19.2    LED Operation .....	15
<b>Wireless Keypads</b>	
20.1    Mounting Keypads .....	15
20.2    Wireless Keypad Association .....	15
<b>Listed Compliance Specifications</b>	
20.1    Introduction .....	16
20.2    Bypass Reports.....	16
20.3    Current Draw.....	16
20.4    Battery Standby.....	16
20.5    Auxiliary and Bell Current .....	16
20.6    Cross Zoning .....	16
20.7    App Key .....	16
<b>Household Burglar-Alarm System Units</b>	
<b>ANSI/UL 1023</b>	
21.1    Bell Cutoff .....	16
21.2    Entry Delay .....	16
21.3    Exit Delay.....	16
21.4    Wireless External Contact .....	16
21.5    Wireless Supervision Time .....	16
21.6    Wireless Audible Annunciation .....	16
21.7    Panel location .....	16
21.8    Test Frequency .....	16
<b>Digital Burglar Alarm Communicator System Units</b>	
<b>ANSI/UL 1635</b>	
22.1    Entry Delay .....	16
22.2    Exit Delay.....	16
22.3    Test Frequency .....	16
22.4    Automatic Bell Test .....	16

**Central Station Burglar Alarm Units****ANSI/UL 1610**

23.1	Central Station.....	17
23.2	Remote Disarm.....	17
23.3	Central Station.....	17
23.4	Closing Wait .....	17

**Household Fire Warning System****ANSI/UL 985 NFPA 72 Specifications**

24.1	Bell Output Definition .....	17
24.2	Household System .....	17
24.3	Household Fire Warning .....	17
24.4	Wireless Supervision Time .....	17
24.5	Wireless Fire Verification.....	17
24.6	Battery Standby.....	17
24.7	Alarm Verification.....	17
24.8	Model 860 .....	17
24.9	Test Frequency .....	17

**California State Fire Marshal Specifications**

25.1	Bell Output Definition .....	17
------	------------------------------	----

**False Alarm Reduction Programmable Options****ANSI/SIA CP-01-2010**

26.1	Shipping Defaults and Recommended Programming .....	18
26.2	Call Waiting .....	19
26.3	Entry Delay .....	19
26.4	Local Bell .....	19
26.5	Minimum Installation Requirements.....	19

**Troubleshooting**

27.1	Troubleshooting Section .....	20
27.2	Common LCD Keypad Displays.....	20

**Wiring Diagrams**

28.1	Multiple Indicating Circuit Modules Installation .....	21
28.2	System Sensor 2-Wire Smoke Detectors .....	22

**Revisions to This Document**

## Panel Specifications

### 1.1 Power Supply

Transformer Input:      Plug-in – 16.5VAC 40 VA, Model 321  
                             Wire-in – 16.5VAC 40 VA, Model 320

Standby Battery:      12VDC, 1.0 Amps Max. charging current  
                             Models 364, 365, 366, 368, or 369  
                             Replace every 3 to 5 years

Auxiliary Output:      12VDC at 500mA  
                             12VDC at 325mA when used with two Model 364 batteries in the Model 341 Enclosure

Bell Output:            12VDC at 1.5 Amps

Smoke Detector Output: 12VDC at 100mA

All circuits inherent power limited

**Note:** Please see the Listed Compliance Specifications section for certificated application requirements.

### 1.2 Communication

Built-in SDLC Digital Dialer communication to DMP Model SCS-1R Receivers  
     Built-in network communication to DMP Model SCS-1R or SCS-VR Receivers  
     Modular cellular communication to DMP Model SCS-1R or SCS-VR Receivers  
     Modular Wi-Fi network alarm signal communication to DMP Model SCS-1R or SCS-VR Central Station Receivers.

Built-in CID (Contact ID) dialer communication to DMP Model SCS-1R Receivers

### 1.3 Panel Zones

Nine 1k Ohm EOL burglary zones: zones 1 to 9

One 3.3k Ohm EOL Class B powered fire zone with reset capability: zone 10

### 1.4 Keypads/Expansion

Connect up to eight supervised alphanumeric keypads.

Connect up to four alphanumeric 9000 Series wireless keypads.

Eight keypads total per panel.

Connect additional unsupervised keypads.

- Graphic Touchscreen, Thinline™, Aqualite™, Clear Touch™, and Icon keypads

In addition, the following zone expanders can be added:

- One, four, eight and 16-zone expansion modules
- Single-zone PIR and glassbreak detectors

### 1.5 Number of Zones

- Onboard zones 1-10
- Eight keypad bus addresses with zones 11-14, 21-24, 31-34, 41-44, 51-54, 61-64, 71-74, and 81-84
- Zone numbers 31 to 34 and 41 to 44 can support 1100 Series Key Fobs or DMP wireless output modules
- XT50 has 20 additional onboard wireless zones numbered 80-99

### 1.6 Outputs

The XT30/XT50 panels provide four open collector outputs rated for 50mA each. A Model 300 Output Harness is required. The open collector outputs provide the ground connection for a positive voltage source.

### 1.7 Enclosure Specifications

The XT30/XT50 panel ships standard in a 340 enclosure with EOL resistors, battery leads, user's guide, and programming sheet.

Enclosure Model	Size	Color	Construction (Cold Rolled Steel)
340	12.5" W x 9.5" H x 2.75" D	Gray (G)	20-Gauge
349	12.5" W x 11.5" H x 3.5" D	Gray (G)	20-Gauge
349A	13.25" W x 11.65" H x 3.6" D	Gray (G)	18-Gauge with 16-Gauge door
341	13" W x 6.55" H x 3.5" D	Gray (G)	20-Gauge

## Introduction

### 2.1 System Configurations

The panel can be programmed to operate as any of the following system types:

- All/Perimeter system that provides one perimeter area and one interior area
- Home/Sleep/Away system that provides one perimeter, one interior, and one bedroom area. The bedroom area provides for any protection devices the user wants disarmed during their sleeping hours and armed in the Away mode.
- Six area system that provides areas of protection that can be independently armed or disarmed.

### 2.2 Caution Notes

Throughout this guide you will see caution notes containing information you need to know when installing the panel. These cautions are indicated with a yield sign. Whenever you see a caution note, make sure you completely read and understand its information. Failing to follow the caution note can cause damage to the equipment or improper operation of one or more components in the system. See the example shown below.



**Always ground the panel before applying power to any devices:** The panel must be properly grounded before connecting any devices or applying power to the panel. Proper grounding protects against Electrostatic Discharge (ESD) that can damage system components.

**Remove All Power From the Panel!** Remove all AC and Battery power from the panel before installing or connecting any modules, cards, or wires to the panel.

### 2.3 Compliance Instructions

For applications that must conform to a local authorities installation standard or a National Recognized Testing Laboratory certificated system, please see the Listed Compliance Specifications section near the end of this guide for additional instructions.

## SYSTEM COMPONENTS

### System Components

#### 3.1 Wiring Diagram

The system wiring diagram in Figure 1 shows some of the accessory devices for use in various applications. A description of each module follows.

#### 3.2 Lightning Protection

Metal Oxide Varistors and Transient Voltage Suppressors help protect against voltage surges on input and output circuits. This transient protection provides additional resistance to electrical surges such as lighting. Additional surge protection is available by installing the DMP 370 or 370RJ Lightning Suppressors.

### 3.3 Accessory Devices

Cellular Communicator Cards	
263C CDMA Cellular Communicator Card	Allows you to connect the XT30/XT50 Series to any compatible CDMA/SMS network.
263H HSPA + Cellular Communicator Card	Allows you to connect the XT30/XT50 Series to any compatible HSPA+/SMS network. The 263H is compatible with XT30 and XT50 Series control panels, version 112 or higher.
Zone and Output Expansion Modules	
710 Bus Splitter/Repeater	Increases keypad wiring distance to 2500 feet.
711 Single Point Zone Expander	Provides one Class B zone for burglary devices and non-powered fire devices.
714, 714-8, 714-16 Zone Expander	Provides Class B zones for burglary and non-powered fire devices.
712-8 Zone Expander	Provides 8 zones for burglary devices.
715, 715-8, 715-16 Zone Expander	Provides 12VDC Class B powered zones for smoke detectors, glassbreak detectors, and other 2- or 4-wire devices.
860 Relay Output Module	Provides one relay and three relay sockets for expansion of up to four relays.
Interface Module	
734 Wiegand Interface Module	Provides arming, disarming, and codeless entry using access control readers.
738Z Z-Wave Interface Module	Provides connection for Z-Wave modules.
Wi-Fi Module	
763 Module	Allows you to add Wi-Fi alarm signal communication to XT30/XT50 panels, version 124 or higher with Level L hardware.
DMP Two-Way Wireless Devices	
1100D/1100DH/1100DI Receiver	Supports transmitters in residential or commercial wireless operation on the keypad bus.
1100R Repeater	Provides additional range for wireless devices.
1101 Universal Transmitter	Provides both internal and external contacts that may be used at the same time to yield two individual reporting zones from one wireless transmitter.
1102 Universal Transmitter	Provides one external contact.
1103 Universal Transmitter	Provides both internal and external contacts that may be used at the same time to yield two individual reporting zones from one wireless transmitter. Requires EOL resistor for external contact. Provides Disarm/Disable functionality.
1106 Universal Transmitter	Provides both internal and external contacts that may be used at the same time to yield two individual reporting zones from one wireless transmitter.
1107 Micro Window Transmitter*	Provides a window transmitter and magnet
1114 Four-Zone Expander*	Provides four wireless zones with EOL resistors.
1116 Relay Output*	Provides one Form C relay.
1117 LED Annunciator*	Provides a visual system status indicator.
1119 Door Sounder*	Provides a battery operated sounder
1121 PIR Motion Detector*	Provides motion detection with pet immunity.
1126R PIR Motion Detector*	Ceiling mount motion detector with panel programmable sensitivity and Disarm/Disable functionality.
1127C/1127W PIR Motion Detector	Wall mount motion detector with panel programmable sensitivity and Disarm/Disable functionality.
1129 Glassbreak Detector*	Detects the shattering of framed glass mounted in an outside wall and provides full-pattern coverage and false-alarm immunity.
1131 Recessed Contact*	Provides concealed protection for doors, windows or other applications.
1135/1135DB Sirens*	Provides a wireless siren
1139 Bill Trap*	Provides a silent alarm option for retail and banking cash drawers.
1141 Wall Button*	One button wall mounted wireless transmitter.
1142BC Two-button Panic Belt Clip Transmitter	Provides portable two-button panic operation.
1142 Two-button Panic Transmitter	Provides permanently mounted under-the-counter two-button panic operation.
1144-D Two-button Panic Transmitter	Key Fob transmitter designed to clip onto a key ring or lanyard that provides two-button panic operation.
1145-4 (Four-Button)* 1145-2 (Two-Button)* 1145-1 (One-Button)*	Key Fob transmitters designed to clip onto a key ring or lanyard.
1148 Personal Pendant*	One button one-button, wireless emergency transmitter designed to be worn as a wristband or on a break-away lanyard.
1161 Residential Smoke Detector	Residential smoke detector with sounder.

# SYSTEM COMPONENTS

1162 Residential Smoke Detector	Residential smoke/heat detector with sounder and fixed rate-of-rise heat detector
1164 Wireless Synchronized Smoke Detector	Commercial or residential, battery powered, wireless, low profile, photoelectric smoke detector, with synchronizing sounder.
<b>* These devices have not been investigated and shall not be used in listed installations</b>	
1183-135F Heat Detector	Fixed temperature heat detector
1183-135R Heat Detector	Fixed temperature and rate-of-rise heat detector
1184 Carbon Monoxide Detector	Carbon Monoxide Detector.
<b>Keypads</b>	
LCD keypads	Allows you to control the panel from various remote locations. Connect up to eight keypads. Model 7060, 7063, 7070, 7073, 7160, 7163, 7170, 7173 Thinline™ keypads, 7060A, 7063A, 7070A, 7073A Aqualite™ keypads, 7360, 7363 Thinline Icon Series keypads, 7872 and 7873 Graphic Touchscreen keypads to the keypad bus using terminals 7, 8, 9, and 10.
9000 Series Wireless LCD keypads	Allows you to control the panel from various remote locations. Connect up to four keypads. 9060, 9063 Wireless Keypads.
9800 Series Wireless Graphic Touchscreen keypads	Allows you to control the panel from various remote locations. Connect up to four keypads. 9862 Wireless Keypads.
<b>* These devices have not been investigated and shall not be used in listed installations</b>	

## 3.4 XT30/XT50 Wiring Diagram

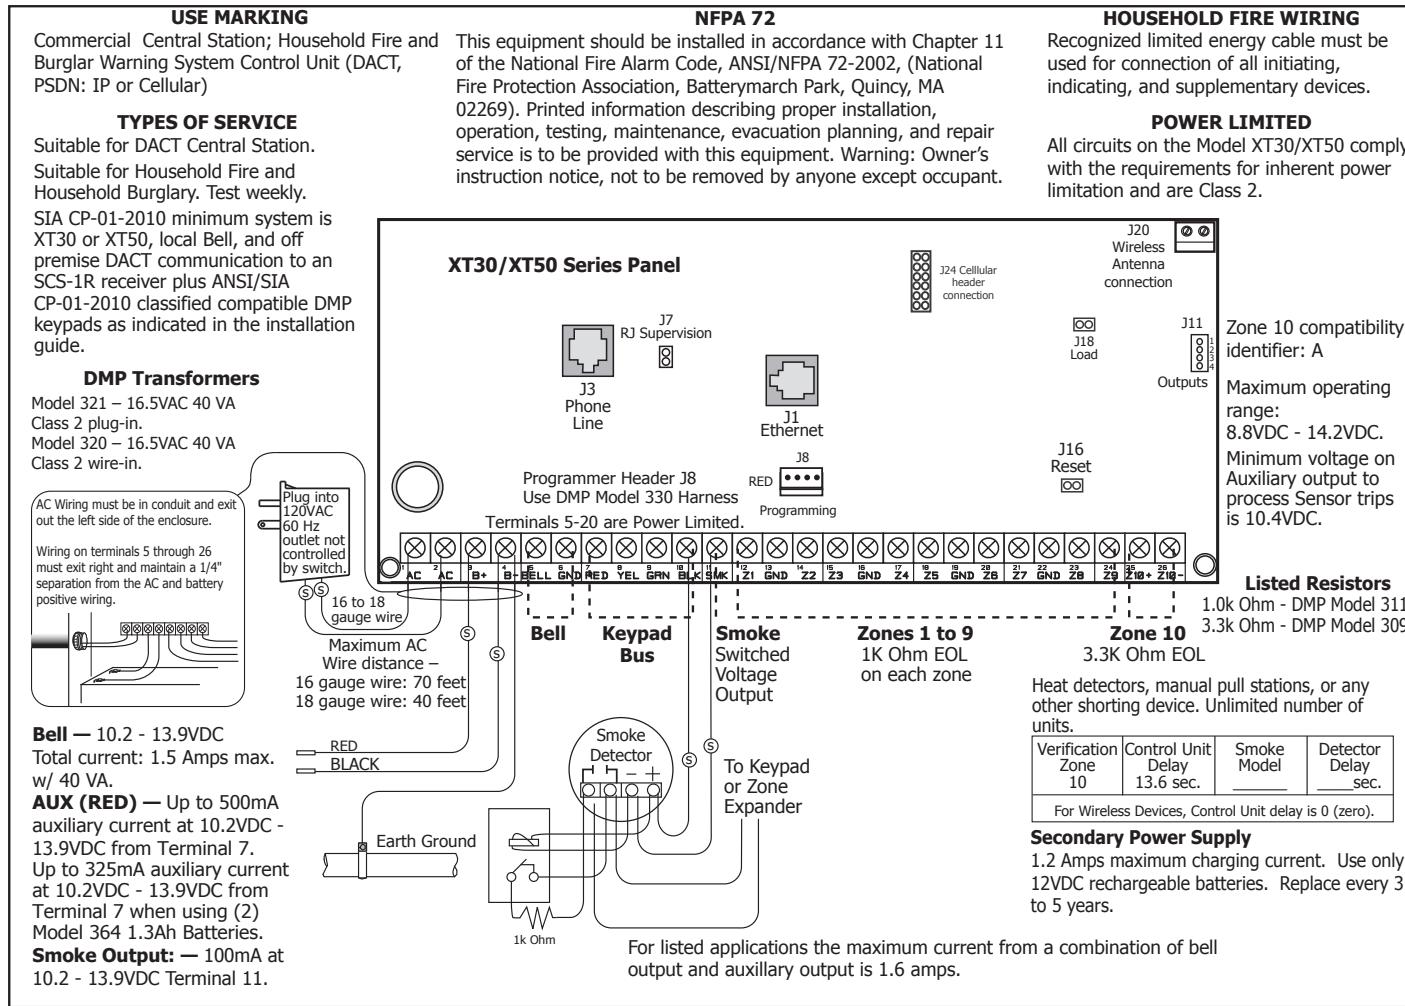


Figure 1: System Wiring Diagram

## Installation

### 4.1 Mounting the Enclosure

The metal enclosure must be mounted in a secure, dry place to protect the panel from damage due to tampering or the elements. It is not necessary to remove the PCB when installing the enclosure. The PCB may be installed in the standard 340 Small enclosure, optional 341 Kiosk enclosure, optional 349 Medium enclosure, or the optional 349A Attack enclosure.

When using cellular communication or on-board wireless with the 341 enclosure, an SMA and wireless antenna exit may be added at the time of the installation. The 349A Attack Resistant enclosure is factory shipped with one knockout on the top left of the enclosure. As needed, additional knockouts may be added at the time of installation. See Figure 3 for the positions on the enclosure that can be added. Each additional knockout must be filled with conduit.

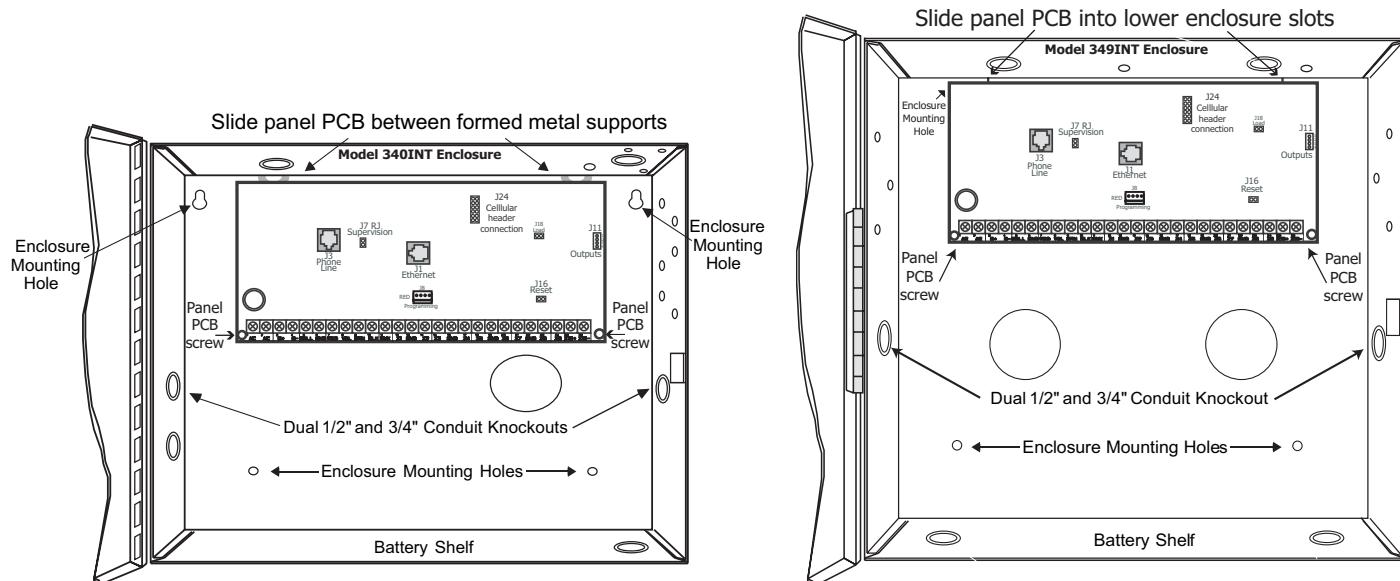


Figure 2: Standard 340 Enclosure (left), Optional 349 Enclosure (right)

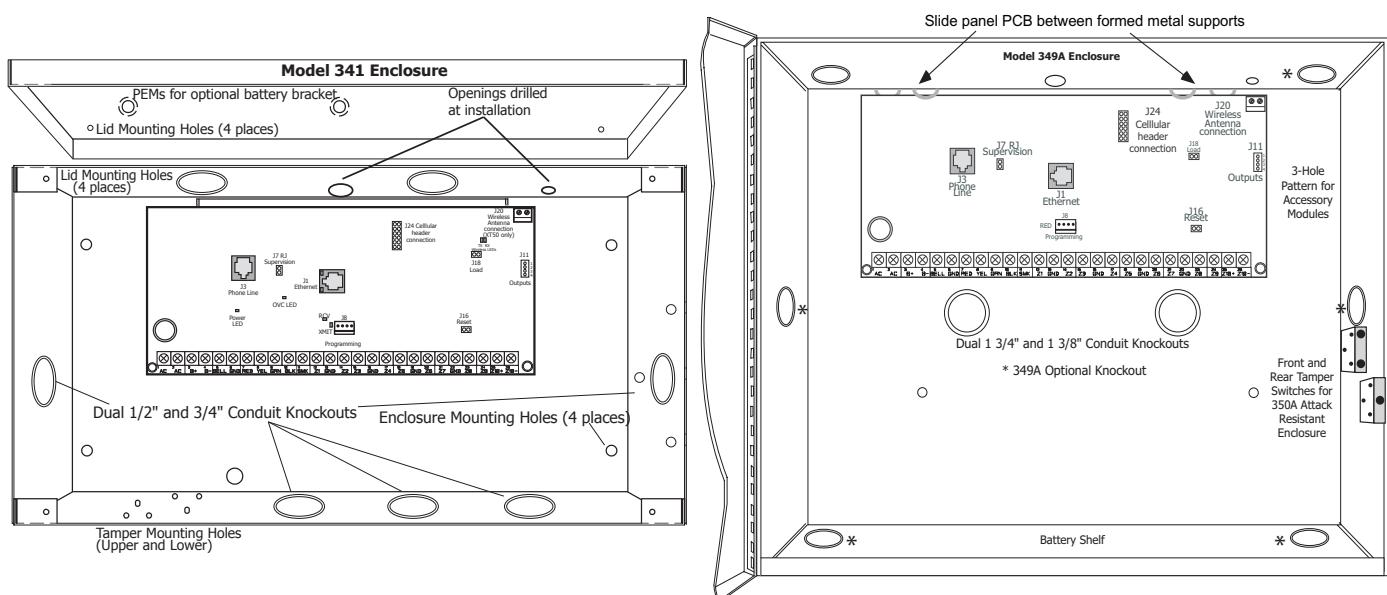


Figure 3: Optional 341 Enclosure (left), Optional 349A Enclosure (right)

## 4.2 Mounting Keypads

DMP keypads have removable covers that allow the base to be mounted on a wall or other flat surface using the screw holes provided on each corner.

For mounting keypads on solid walls, or for applications where conduit is required, use a DMP 695 or 696 keypad conduit backbox.

## 4.3 Installation Specifications

Several factors determine the performance characteristics of the keypad bus: the length of wire used, the number of devices connected, and the voltage at each device. When planning a keypad bus installation, keep in mind the following four specifications:

1. DMP recommends using 18 or 22-gauge unshielded wire for all keypad circuits. Do not use twisted pair or shielded wire for keypad bus data circuits.
2. On keypad bus circuits, to maintain auxiliary power integrity when using 22-gauge wire do not exceed 500 feet. When using 18-gauge wire do not exceed 1,000 feet. To increase the wire length or to add devices, install an additional power supply.

**Note:** Each panel allows a specific number of supervised keypads. Add additional keypads in the unsupervised mode. Refer to the panel installation guide for the specific number of supervised keypads allowed.

3. Maximum distance for any one bus circuit (length of wire) is 2,500 feet regardless of the wire gauge. This distance can be in the form of one long wire run or multiple branches with all wiring totaling no more than 2,500 feet. As wire distance from the panel increases, DC voltage on the wire decreases.
4. Maximum voltage drop between the panel (or auxiliary power supply) and any device is 2.0VDC. If the voltage at any device is less than the required level, add an auxiliary power supply at the end of the circuit. When voltage is too low, the devices cannot operate properly.

For additional information refer to the 710 Installation Sheet (LT-0310) and or the LX-Bus/Keypad Bus Wiring Application Note (LT-2031).

## Primary Power Supply

### 5.1 AC terminals 1 and 2

Connect the transformer wires to terminals 1 and 2 on the panel. Use no more than 70 ft. of 16 gauge, or 40 ft. of 18 gauge, wire between the transformer and the panel to deliver a minimum of 15.5VAC when 500mA of current draw is used from the auxiliary power supply terminal 7.



**Always ground the panel before applying power to any devices:** The panel must be properly grounded before connecting any devices or applying power to the panel. Proper grounding protects against Electrostatic Discharge (ESD) that can damage system components. See Earth ground, in the Secondary Power Supply section.

### 5.2 Transformer Types

The transformer for the panel is 16.5VAC 40 VA, which provides up to 1.5 Amps of bell output current, 500mA of auxiliary current, and 100mA of smoke detector output. Use either the Model 320 wire-in or 321 plug-in transformer with the panel. The total current available is limited by the total battery standby requirements of the installation.



The transformer must be connected to a 120VAC 60 Hz commercial power outlet that is not controlled by a wall switch. **Never share the transformer output with any other equipment.**

### 5.3 Power LED

When either AC transformer power or DC battery power is connected to the panel the PWR LED shows steady green.

## Secondary Power Supply

### 6.1 Battery Terminals 3 and 4

Connect the black battery lead to the negative battery terminal. The negative terminal connects to the enclosure ground internally through the XT30 or XT50 circuit board. Connect the red battery lead to the positive battery terminal. Observe polarity when connecting the battery.

Add a second battery in parallel using the DMP Model 318 Dual Battery Harness. **DMP requires each battery be separated by a PTC in the battery harness wiring to protect each battery from a reversal or short within the circuit. See Figure 4.**



***Use sealed lead-acid batteries only:***

Use 12VDC sealed lead-acid rechargeable battery. Batteries supplied by DMP have been tested to ensure proper charging with DMP products.

***GEL CELL BATTERIES CANNOT BE USED WITH THE XT30/XT50 PANEL.***

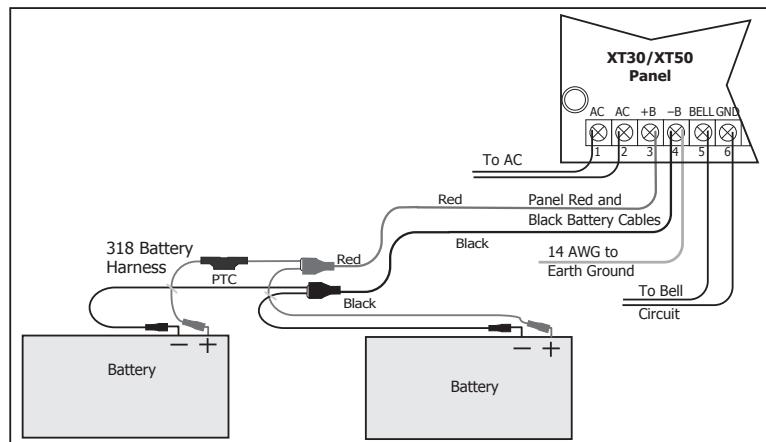


Figure 4: Wiring Multiple Batteries

### 6.2 Earth Ground

Terminal 4 of the panel must be connected to earth ground using 14 gauge or larger wire to provide proper transient suppression. DMP recommends connecting to a metal cold water pipe or ground rod only. Do not connect to electrical conduit or a telephone company ground.

### 6.3 Replacement Period

DMP recommends replacing the battery every 3 to 5 years under normal use.

### 6.4 Discharge/Recharge

The panel battery charging circuit float charges at 13.9VDC at a maximum current of 1.2 Amps using a 40 VA transformer. The total current available is reduced by the combined auxiliary current draw from terminals 7, 11, and 25. The various battery voltage levels are listed below:

Battery Trouble: Below 11.9VDC

Battery Restored: Above 12.6VDC

### 6.5 Battery Supervision

The panel tests the battery once every hour when AC power is present. This test occurs 15 minutes past each hour and lasts for five seconds. A load is placed on the battery and if its voltage falls below 11.9VDC a low battery is detected. If AC power has failed, a low battery is detected any time the battery voltage falls below 11.9VDC.

If a low battery is detected with AC power present, the test is repeated every two minutes until the battery charges above 12VDC; the battery restored voltage. If a faulty battery is replaced with a fully charged battery, the restored battery will not be detected until the next two-minute test is done.

### 6.6 XT30/XT50 Power Requirements

During AC power failure, the panel and all auxiliary devices connected draw their power from the battery. All devices must be taken into consideration when calculating the battery standby capacity. On the following page is a list of the power requirements of the panel. Add the additional current draw of DMP keypads, smoke detector output, and any other auxiliary devices used in the system for the total current required. The total is then multiplied by the total number of standby hours required to arrive at the total Ampere-hours required.

## 6.7 XT30/XT50 Standby Battery Calculations

\* Based on 10% of active zones in alarm condition. = Amp-hrs Required

## Bell Output

### 7.1 Terminals 5 and 6

Nominal 12VDC is supplied by terminal 5 on the panel to power alarm bells or horns. The output is rated for a maximum of 1.5 Amps with a 40 VA transformer. This output can be steady, pulsed, or Temporal Code 3 depending upon the Bell Action specified in Output Options programming. Terminal 6 is the ground reference for the bell circuit. If using a horn or siren, a 1k 0hm resister should be added across the bell circuit for supervision.

## Keypad Data Bus

### 8.1 Description

Terminals 7, 8, 9, and 10 of the panel are designated as the keypad data bus. In addition to keypads, the XT30/XT50 allows the connection of any combination of zone expansion modules, Glassbreak Detectors, and PIRs to the keypad bus up to the maximum of eight devices.

### 8.2 Terminal 7 - RED

Nominal 12VDC is supplied at terminal 7 to power keypads and zone expanders. This is also where power for any auxiliary device is supplied. The ground reference for terminal 7 is terminal 10. The maximum output is rated at 500mA. All auxiliary devices totaled together must not exceed the Terminal 7 maximum current rating of 500mA. When the number of keypads or other expansion devices attached exceeds the amount of output current available, attach an external power supply as defined in the Model 710 Installation Sheet (LT-0310).

### 8.3 Terminal 8 - YELLOW

Data receive from keypads and zone expanders.

### 8.4 Terminal 9 - GREEN

Data transmit to keypads and zone expanders.

### 8.5 Terminal 10 - BLACK

Terminal 10 is the ground reference for LCD keypads, zone expanders, and any auxiliary devices being powered by terminals 7 and 11.

### 8.6 Keypad Bus LEDs

The two LEDs located just above terminal 13 indicate keypad transmit data (XMIT) and keypad receive data (RCV). The bottom LED flashes green to indicate data being transmitted from the panel. The top LED flashes yellow to indicate data being received by the panel from keypads, zone expanders, etc.

### 8.7 Programming (PROG) Connection

A locking 4-pin PROG header is provided to connect a keypad when using a DMP Model 330 Programming Cable. This provides a quick and easy connection for programming the panel.

### 8.8 Keypad Addressing

Keypad Bus expansion zones are numbered in groups of four corresponding to the address. Example: address 1 is zones 11-14 and address 5 is zones 51-54. There are a maximum of 32 zones possible on the Keypad Bus. All keypad zones terminate with a 1k 0hm EOL resister.

Address	XT30/XT50 Zone Number
1	11-14
2	21-24
3	31-34
4	41-44
5	51-54
6	61-64
7	71-74
8	81-84

# INSTALLATION

## 8.9 Overcurrent OVC LED

The Overcurrent LED (OVC) lights Red when the devices connected to the Keypad Bus draw more current than the auxiliary output rating. The OVC LED is located above terminals 9 and 10 as shown in Figure 5. When the OVC LED lights Red, the Keypad bus/auxiliary power (terminal 7) and the PROG header shut down.

## Smoke and Glassbreak Detector Output

### 9.1 Terminal 11

Nominal 12VDC at 100mA maximum (shared by terminal 25) is supplied at terminal 11 to power 4-wire smoke detectors or other auxiliary powered devices. This output can be turned off by the user for 5 seconds using the Sensor Reset option in the User Menu. Terminal 10 is the ground reference for terminal 11.

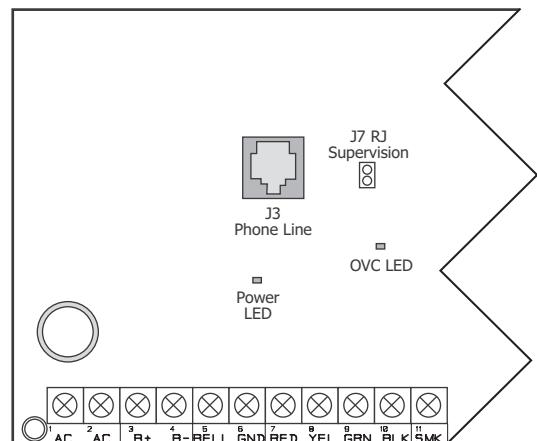


Figure 5: OVC LED location

## Burglary Zones

### 10.1 Description

On XT30/XT50 panels, terminals 12 to 24 are the nine burglary zones. For programming purposes, the zone numbers are 1 to 9. The zone configurations on terminals 12 to 24 are described below.

Terminal	Function	Terminal	Function
12	Zone 1 voltage sensing	19	Ground for zones 5 & 6
13	Ground for zones 1 & 2	20	Zone 6 voltage sensing
14	Zone 2 voltage sensing	21	Zone 7 voltage sensing
15	Zone 3 voltage sensing	22	Ground for zones 7, 8, & 9
16	Ground for zones 3 & 4	23	Zone 8 voltage sensing
17	Zone 4 voltage sensing	24	Zone 9 voltage sensing
18	Zone 5 voltage sensing		

The voltage sensing terminal measures the voltage across the 1k Ohm End-of-Line resistor and the zone's ground terminal. Dry contact sensing devices can be used in series (normally-closed) or in parallel (normally-open) with any of the burglary protection zones.

### 10.2 Operational Parameters

Each burglary protection zone detects three conditions: open, normal, and short.

The parameters for each are listed below:

Condition	Resistance on zone	Voltage on zone terminal
Open	over 1300 ohms	over 2.0VDC
Normal	600 to 1300 ohms	1.2 to 2.0VDC
Short	under 600 ohms	under 1.2VDC

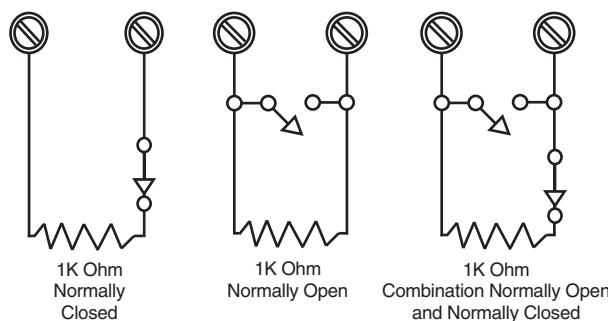


Figure 6: Protection Zone Contact Wiring

## 10.3 Zone Response Time

A condition must be present on a zone for 500 milliseconds before it is detected by the panel. Ensure detection devices used on the protection zones are rated for use with this delay.

## 10.4 Keyswitch Arming Zone

You can use a momentary keyswitch on a zone programmed as an Arming type for use in arming and disarming the system without a code.

## Powered Zone for 2-Wire Smoke Detectors

### 11.1 Terminals 25 and 26

A resettable 2-wire Class B powered zone is provided on terminals 25 (positive) and 26 (negative) of the panel. For programming purposes, the zone number is 10 on the XT30/XT50. The zone uses a Model 309, 3.3k Ohm EOL resistor (provided with the panel) and has an operating range of 8.8 to 13.9VDC.

The compatibility identifier is: B

Caution: Sensor reset on zone 10 drops power to devices on this zone, causing the panel to sense an open condition on all zone types other than Fire, Fire Verify, and Supervisory. Whenever non-Fire and non-Supervisory zone types are used on zone 10, make the appropriate adjustments to the zone's Armed Action to prevent false alarms from occurring.

Manufacturer	Model	Detector ID	# of Detectors	Zone Expansion Modules
DMP/Hochiki	SLR-835B	HD-6	7	715, 715-8, 715-16, 725
Sentrol/ESL	429AT, 521B, 521BXT	S09A	12	715, 715-8, 715-16
System Sensor	2WTA-B, 2WTR-B	A	10	715, 715-8, 715-16

## Annunciator Outputs

### 12.1 Description

The four annunciator outputs can be programmed to indicate the activity of the panel's zones or conditions occurring on the system. Annunciator outputs do not provide a voltage but instead switch-to-ground voltage from another source. The outputs can respond to any of the conditions listed below:

- 1) Activation by zone condition: Steady, Pulse, Momentary, or Follower
- 2) Manually from the keypad
- 3) Communication failure
- 4) Armed area annunciation
- 5) Fire Alarm or Fire Trouble
- 6) Ambush alarm
- 7) Exit and Entry timers
- 8) System Ready
- 9) Late to Close

### 12.2 Harness Wiring

The open collector outputs are accessible by installing the DMP 300 Harness on the 4-pin OUTPUTS header. The output locations are shown below. For listed applications, devices connected to outputs must be located within the same room as the panel.

Output	Color	Wire	Output	Color	Wire
1	Red	1	3	Green	3
2	Yellow	2	4	Black	4

### 12.3 Model 860 Relay Module

Connect a Model 860 Relay Module to the panel to provide relays for the annunciator outputs that can be used for electrical isolation between the alarm panel and other systems or for switching voltage to control various functions. The module includes one relay and provides three additional sockets for expansion of up to four relays. Power is supplied to the relay coils from the panel keypad bus. The 860 mounts inside the panel enclosure using the 3-hole mounting configuration. Plastic standoffs are provided with the module for ease of installation. A 4-wire harness is also provided that connects the Model 860 to the panel.

**Relay Contact Rating:** 1 Amp at 30VDC

## PHONE LINE RJ Connector

### 13.1 Description

Connect the panel to the public telephone network by installing a DMP 356 RJ Cable between the panel's PHONE LINE connector and the RJ31X or RJ38X phone jack. CAUTION - To reduce the risk of fire, use only No. 26 AWG or larger telecommunication line cord, such as DMP Model 356 Series Phone Cords.

A two pin RJ SUP header is provided to allow monitoring of the telephone cable connected between the panel and a RJ38X jack (pins 2 and 7 jumpered). Attach a DMP Model 306 Harness between RJ SUP and any available zone. The RJ SUP pins are connected via the telephone cable to the RJ38X jack pins 2 and 7. The RJ38X jack provides a jumper between pins 2 and 7 which completes the circuit. Program the zone as a Supervisory type (SV). When the telephone cable is removed, the keypad displays zone trouble and produces a steady tone.

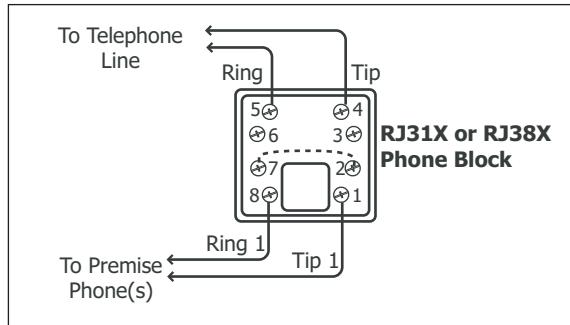


Figure 7: Phone Jack Wiring

### 13.2 FCC Registration

The panel complies with FCC part 68 and is registered with the FCC.

Registration number: CCKAL00BXT50

Ringer Equivalence: 0.0B

### 13.3 Notification

Registered terminal equipment must not be repaired by the user. In case of trouble, the device must be immediately unplugged from the telephone jack. The factory warranty provides for repairs. Registered terminal equipment may not be used on party lines or in connection with coin telephones. Notification must be given to the telephone company with the following information:

- a. The particular line(s) the service is connected to
- b. The FCC registration number
- c. The ringer equivalence
- d. The make, model, and serial number of the device

## ETHERNET Connector

### 14.1 Description

The ETHERNET Connector is available on the Network version and connects directly to an Ethernet network using a standard patch cable.

### 14.2 Ethernet LEDs

The two LEDs, located on the left side of the ETHERNET Connector, indicate network operation. The top, Link LED is a steady green light when an ethernet cable is connected. The bottom, Activity LED flashes yellow to indicate messages are being received or transmitted.

## RESET Header

### 15.1 Description

The RESET header is located just above the terminal strip on the right side of the circuit board and is used to reset the XT30/XT50 microprocessor. To reset the panel when first installing the system, install the reset jumper before applying power to the panel. After connecting the AC and battery, remove the reset jumper.

To reset the panel while the system is operational, for example, prior to reprogramming, install the reset jumper without powering down the system. Remove the reset jumper after one or two seconds.

After resetting the panel, begin programming within 30 minutes. If you wait longer than 30 minutes, reset the panel again.

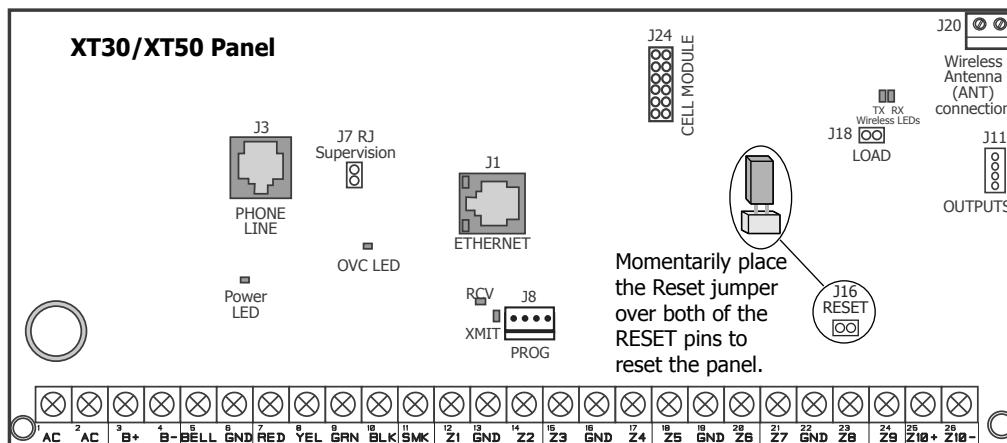


Figure 8: Panel Showing the RESET Header

## Flash LOAD Jumper

### 16.1 Description

The XT Series panel software can be updated via the panel's Programming (PROG) header. To update the panel with a new software version, complete the following steps at the protected premise:

#### Model 399 Cable

1. Place a jumper across the RESET header and then remove the yellow and green wires from keypad bus terminals 8 and 9.
2. Connect a DMP update Cable from the PROG header to the serial port of your PC operating Remote Link and containing the XT RU file. Requires Remote Link 1.43 or higher.
3. Start Remote Link and create or open the XT Series control panel account that matches the panel to be updated.
4. Set the Connection Information Type to Direct with a baud rate of 38400 and choose the appropriate COM port.
5. Select Panel>Remote Update, then select the correct RU file for the XT panel model.
6. While placing a short across the LOAD header, remove the jumper from the RESET header. Click <Update> in Remote Link.
7. After the software version is updated, remove the short from the LOAD header. Place the jumper across RESET then remove the 399 cable.
8. Replace the yellow and green wires to terminals 8 and 9.
9. Remove RESET jumper to resume normal panel operation.

# INSTALLATION

## Model 400 USB Flash Module

1. Remove the yellow and green wires from keypad bus terminals 8 and 9.
2. Place a jumper across the RESET header.
3. Place a jumper across the LOAD header.
4. Connect the USB flash drive to the Model 400 and connect the assembly to the panel's PROG header. The LED on the Model 400 will flash and then display steady green.
5. Remove the jumper from the RESET header, press and release the load button on the Model 400 to initiate the firmware update. The LED on model 400 will flash slowly. If the LED displays fast flashes it means the firmware update was unsuccessful.
6. The update will take approximately 4.5 minutes and when complete the LED on the Model 400 will display steady green.
7. Replace the jumper across RESET then remove the USB flash drive and Model 400 assembly.
8. Remove the jumper from the LOAD header.
9. Remove the jumper from the RESET header.
10. Reconnect the yellow and green wires to terminals 8 and 9.

## Cellular Connections

### 17.1 Cellular

The CELL MODULE header is provided to connect a 263C CDMA Cellular Communicator or 263H HSPA+ Cellular Communicator. The cellular antenna connection protrudes through the top of the enclosure.

**Note: DO NOT MISALIGN THE CELL MODULE 12 PIN CONNECTOR ONTO CELL MODULE HEADER.** If needed, the PCB can be removed from the enclosure to allow placement of the cell module.

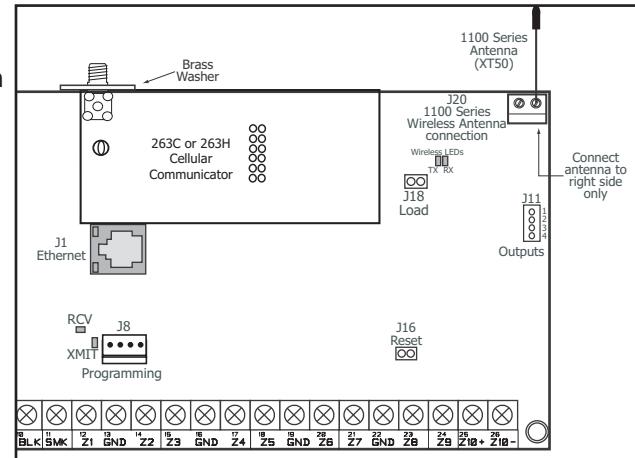


Figure 9: Cellular and 1100 Series Wireless Antenna Connections

## Wi-Fi Connection

### 18.1 Wi-Fi

The 763 Wi-Fi Module allows you to add Wi-Fi alarm signal communication to XT30/XT50 panels. The 763 connects to the 7 pin EXP header on compatible panels using the included cable and operates at 12VDC from the panel power supply.

The 763 Wi-Fi Module is compatible with all DMP XT30/XT50 Series control panels with Level L hardware and Version 124 or higher firmware.

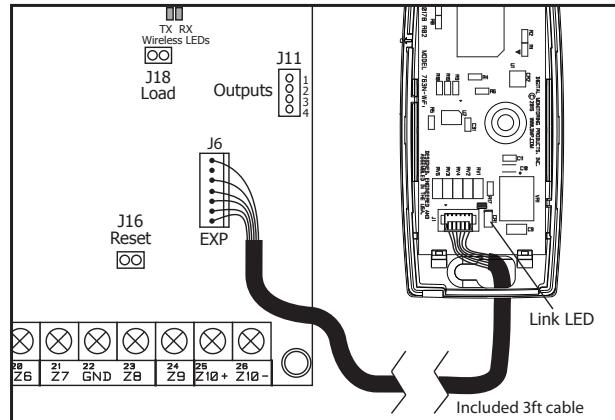


Figure 10: 763 to XT30/XT50 Series

## On-Board 1100 Series Wireless Antenna Connection

### 19.1 Wireless Antenna

The XT50 Wireless Antenna (ANT) terminal block is located at the top right corner of the circuit board. The antenna installs through a small opening in the top of the enclosure and is attached to the panel using the right terminal. The left terminal is not used.

The XT50 built-in wireless operates with DMP 1100 Series transmitters. See section 3.4 for a list of accessory devices.

### 19.2 LED Operation

**Green (TX):** With a wireless house code enabled, the green LED flashes every time the receiver transmits (32 times per second). If a house code is not programmed in the panel, the panel is reset, or the panel is powered off, the green LED will be off. Under normal operation, the green LED flashes constantly with no interruption or change.

**Yellow (RX):** The yellow LED flashes every time the receiver hears a message from a programmed wireless transmitter. When a message is sent by a transmitter, typically by pressing or releasing the tamper switch, the yellow LED should flash indicating that the receiver received a message from the transmitter. If the LED never flashes, the transmitter is not getting through to the receiver. This could be because of a misprogrammed serial number or the transmitter is too far away. Under normal operation, the yellow LED will flash at every trip of every wireless transmitter and occasionally when the transmitters perform their periodic check-in. It is not unusual for this LED to stay off for many minutes at a time when no transmitters are communicating.

## Wireless Keypads

### 20.1 Mounting Keypads

DMP keypads have removable covers that allow the base to be mounted on a wall, desk stand or other flat surface using the screw holes provided on each corner.

### 20.2 Wireless Keypad Association

Enable Wireless Keypad Association operation on both the keypad and panel.

To enable wireless keypad association operation on a LCD Wireless keypad, press and hold the Back Arrow key and CMD until SET BRIGHTNESS displays. Enter the code 3577 (INST) at the keypad and press CMD. Press KPD RF to start the RF survey communication. The keypad displays its wireless serial number and RF SURVEY.

To enable association operation on a Wireless Graphics Touchscreen keypad, access the Options menu through the carousel menu. While in the Options display, press the Installer Options icon. Enter the code 3577 (INST) at the keypad and press CMD. Press KPD RF to start the RF survey communication. The keypad displays its wireless serial number and RF SURVEY.

The keypad Power/Armed LED turns Red, indicating communication has not yet been established with the panel receiver. When successful communication has been established, the Power/Armed LED turns Blue on Graphics keypads or Green on LCD keypads.

To enable association operation in the XT30/XT50 panel, reset panel three times allowing the keypad bus transmit light to begin flashing between each reset.

For 60 seconds the panel listens for wireless keypads that are in RF Survey and have not been programmed, or associated into another panel. Wireless keypads are assigned to the first open device position in Device Setup automatically, based upon the order in which they are detected. The keypad logo turns Green to indicate it has been associated with the panel.

**Note:** A maximum of four wireless keypads are allowed on each panel.

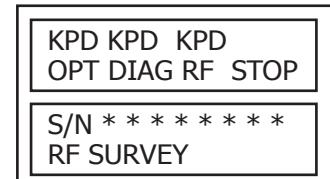


Figure 11: Keypad Screen  
Installer Options

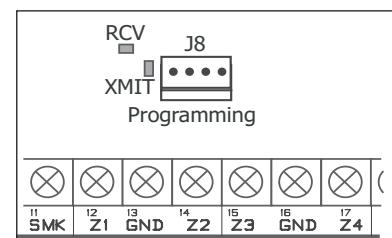


Figure 12: Transmit and  
Receive LED's

## **Listed Compliance Specifications**

### **20.1 Introduction**

The programming and installation specifications contained in this section must be completed when installing the XT30/XT50 in accordance with any of the ANSI/UL burglary standards. Additional specifications may be required by a particular standard.

### **20.2 Bypass Reports**

The bypass reports must be programmed as YES for all listed burglary applications.

### **20.3 Current Draw**

The total current draw from a combination of auxiliary, smoke, and bell output terminals must not exceed 1.6 Amps.

### **20.4 Battery Standby**

Use battery Models 365 (12VDC 9Ah) or 366 (12VDC 18Ah) with the XT30/XT50 panel when installed in the 340, 341, 349, or 349A enclosures. The Model 364 (12VDC 1.3Ah) battery is for use with the XT30/XT50 panel when using the 341 enclosure with the optional 341B Battery Bracket. The Model 364 battery is rated for 4 hours of standby time.

### **20.5 Auxiliary and Bell Current**

For listed applications, the maximum auxiliary current is 400mA, and the maximum bell current is 500mA.

### **20.6 Cross Zoning**

Each zone must have the capability of protecting the common area individually.

### **20.7 App Key**

The Remote Option App Key has not been evaluated for use in listed applications.

## **Household Burglar-Alarm System Units** **ANSI/UL 1023**

### **21.1 Bell Cutoff**

The bell cutoff time cannot be less than four minutes.

### **21.2 Entry Delay**

The maximum entry delay used must not be more than 45 seconds.

### **21.3 Exit Delay**

The maximum exit delay used must not be more than 60 seconds.

### **21.4 Wireless External Contact**

When used, the External Contact of 1101, 1102 or 1106 must be programmed Normally Closed.

### **21.5 Wireless Supervision Time**

The Zone Information Supervision Time cannot be set to 0 (zero).

### **21.6 Wireless Audible Annunciation**

The Wireless Audible option must be selected as DAY for residential applications.

### **21.7 Panel location**

Mount panel inside protected area.

### **21.8 Test Frequency**

The Test Frequency option must be programmed to send a report at least once every 30 days.

## **Digital Burglar Alarm Communicator System Units** **ANSI/UL 1635**

### **22.1 Entry Delay**

The maximum entry delay used must not be more than 60 seconds.

### **22.2 Exit Delay**

The maximum exit delay used must not be more than 60 seconds.

### **22.3 Test Frequency**

The Test Frequency option must be programmed to send a report once every 24 hours.

### **22.4 Automatic Bell Test**

This option must be programmed as YES.

## Central Station Burglar Alarm Units

### ANSI/UL 1610

#### **23.1 Central Station**

Commercial Burglary is provided when the Check-in and Fail Time time is set to 3 minutes for Net or Cell communication.

**Note:** The SecureCom Wireless text plan selected for the panel should match or exceed the programmed Monthly Limit or additional cellular charges may apply.

Digital Dialer Central Station (DACT) service for commercial application can be provided by adding a listed local audible signal appliance and placing the XT30 or XT50 panel into the Model 349A Attack Resistant Enclosure.

#### **23.2 Remote Disarm**

REMOTE DISARM must be programmed as NO.

#### **23.3 Central Station**

MESSAGE TO TRANSMIT programming for zones must not be set to LOCAL (L).

#### **23.4 Closing Wait**

Automatic Bell Test and Opening/Closing must be set to YES to enable Closing Wait. Closing Wait provides a delay time before a monitored system arms until the panel receives an acknowledgment of the closing report from the central station receiver.

## Household Fire Warning System

### ANSI/UL 985 NFPA 72 Specifications

#### **24.1 Bell Output Definition**

The bell output of the Model XT30/XT50 must be programmed to operate steady on burglary alarms and temporal on fire alarms. See the XT30/XT50 Programming Guide.

#### **24.2 Household System**

An alarm sounding device must be installed indoors so that it is clearly heard in all sleeping areas.

#### **24.3 Household Fire Warning**

Recognized limited energy cable must be used for connection of all initiating, indicating, and supplementary devices.

#### **24.4 Wireless Supervision Time**

The Zone Information Supervision Time must be 3 minutes for fire devices. See the XT30/XT50 Programming Guide.

#### **24.5 Wireless Fire Verification**

When used, the Model 1161 and 1162 wireless smoke detectors must not be programmed as Fire Verification (FV) zone type. See the XT30/XT50 Programming Guide.

#### **24.6 Battery Standby**

For UL listed applications, the panel must have 24 Hour battery standby operation. The Model 364 battery should not be used for fire installations.

#### **24.7 Alarm Verification**

Alarm Verification must only be enabled on smoke detectors that do not employ an integral alarm verification feature.

#### **24.8 Model 860**

When using the Model 860 Relay Output, a fire and non-fire device must not share a relay.

#### **24.9 Test Frequency**

The Test Frequency option must be programmed to send a report at least once every 30 days.

## California State Fire Marshal Specifications

#### **25.1 Bell Output Definition**

The bell output of the Model XT30/XT50 must be programmed to operate steady on burglary alarms and temporal on fire alarms.

# False Alarm Reduction Programmable Options

## ANSI/SIA CP-01-2010

### 26.1 Shipping Defaults and Recommended Programming

SIA CP-01 FEATURE PARAGRAPH # AND DESCRIPTION	DMP PROGRAMMING GUIDE LT-0981 SECTION #	REQUIREMENT	RANGE	SHIPPING DEFAULT	RECOMMENDED PROGRAMMING*
4.2.2.1 Exit Time	8.6 Exit Delay	Required (Programmable)	45 sec. - 250 sec.	60 Seconds	60 Seconds
4.2.2.2 Progress Annunciation	13.14 Prewarn Address	Allowed	Individual keypads may be disabled per zone	All keypads enabled	All keypads enabled
4.2.2.3 Exit Time Restart	8.6 Exit Delay	Required Option	For re-entry during exit time	Enabled	Enabled
4.2.2.5 Auto Stay Arm on Unvacated Premises	8.17 Occupied Premise - See Install Guide	Required Option (except for remote arming)	Occupied Premise NO/ YES option	Enabled	Enabled Yes for Residential Applications
4.2.4.4 Exit Time and Progress Annunciation/ Disable - for Remote Arm	Not Available on Remote Arming	Allowed Option	Progress Annunciation Always disabled for Remote Arming	Not Available	Remote Arming not allowed for CP-01 installations.
4.2.3.1 Entry Delay(s)	8.5 Entry Delay	Required (Programmable)	30 sec. - 240 Sec. **	30 Seconds	At least 30 Seconds **
4.2.5.1 Abort Window - for Non-Fire Zones	3.3 Transmit Delay	Required Option	Disable by zone or zone type	Enabled NT DY EX Zone	Enabled
4.2.5.1 Abort Window Time - for Non-Fire Zones	3.3 Transmit Delay	Required (Programmable)	20 sec., 30 sec., or 40 sec. **	30 Seconds	At least 20 Seconds **
4.2.5.1.2 Abort Annunciation	3.3 Transmit Delay	Required Option	Announce that no alarm was transmitted	Yes	Yes
4.2.5.4.1 Cancel Annunciation	Always Enabled - Not Programmable	Required Option	Announce that a Cancel was transmitted (S49)	Always Enabled	Yes
4.2.6.1 & 4.2.6.2 Duress Feature	User Code + 1 = Ambush Code Not Available	Allowed Option	No 1 + derivative of another user code/no duplicates with other user codes	Code +1 Always Disabled	Not Programmable
4.3.1 Cross Zoning	13.16 Cross Zone	Required Option	Yes/No Zone Programming	No	Enabled using two or more programmed zones
4.3.1 Programmable Cross Zoning Time	8.7 Cross Zone Time	Allowed	4 sec. - 250 sec.	0 Seconds	Per walk path in protected premises
4.3.2 Swinger Shutdown	Not Available – Always On	Required	1-6 trips	2 trips	2 trips
4.3.2 Swinger Shutdown Disable	13.13 Swinger Bypass	Allowed	For non-police response zones	Yes	Enabled (all zones)
4.3.3 Fire Alarm Verification	13.5 Zone Type	Required Option	FV Type Zone	No	Yes as required (unless sensors can self verify)
4.5 Call Waiting Cancel	3.17 First Telephone Number	Required Option	Include *70P in Telephone Number	Disabled	Enabled if user has call waiting
4.6.3 System Test	17.5 Walk Test	Allowed	Test all protection devices	N/A	N/A
4.6.5 Communications	17.5 Walk Test	Not Allowed	N/A	N/A	N/A

\* Programming at installation may be subordinate to other listed requirements for the intended application.

\*\* For listed installations, combined Entry Delay and Transmit Delay should not exceed 1 minute.

## 26.2 Call Waiting

The Call Waiting default setting is disabled. To cancel the Call Waiting feature, program \* (star) 7 0 P (pause), the standard telephone code prefix that cancels call waiting, into the telephone number string. Cancel Call Waiting for telephone lines that have Call Waiting operational on the telephone line. See the XT30/XT50 Programming Guide.



**Caution:** A call waiting cancel programmed on a non-call waiting telephone line, would prevent communication to the central station.

## 26.3 Entry Delay

Only use Entry Delay 1. Do not use Entry Delay 2. See the XT30/XT50 Programming Guide.

## 26.4 Local Bell

All non-fire zones such as Night, Day, Exit, Aux1 and Aux 2 must be programmed for local bell enabled with a bell cutoff time set to a minimum of 6 minutes to provide a cancel window of 5 minutes or greater. This does not apply to manually operated zone types such as Panic and Emergency.

## 26.5 Minimum Installation Requirements

SIA CP-01-2010 minimum system installation requirements include an XT30 or XT50, a local Bell, and off premise DACT communication to an SCS-1R receiver plus one of the following compatible keypads.

7060, 7063, 7070, 7073, 7160, 7163, 7170, or 7173 Thinline™ keypads

7060A, 7063A, 7070A, or 7073A Aqualite™ keypads

7360 or 7363 Thinline™ Icon keypads

7872 or 7873 Graphic Touchscreen Keypads

## TROUBLESHOOTING

### Troubleshooting

#### 27.1 Troubleshooting Section

This section provides troubleshooting information for use when installing or servicing an XT30/XT50 system.

Problem	Possible Cause	Possible Solutions
Keypad displays "SYSTEM TROUBLE"	RESET Jumper is installed.	Remove the RESET reset jumper.
	Open or short on the green data wire to the keypad.	Check for broken or shorted wires between the panel and the keypad.
	Bad keypad or zone expander is affecting the Green data wire.	Replace keypad or zone expander.
Keypad keyboard is not functional. When a key is pressed, only a short beep is emitted.	Open or short on the yellow data wire to the keypad.	Check for broken or shorted wires between the panel and the keypad.
	Bad keypad or zone expander is affecting the Yellow data wire.	Replace keypad or zone expander.
Keypad XMIT Green LED is off	Panel is reset.	Remove RESET jumper.
	Flash Load enabled.	Remove LOAD jumper and reset panel.
Keypad RCV Yellow LED is off	Keypad/expanders are not connected to panel.	Connect keypad/expanders.
	Keypad/expanders are greater than eight.	Check keypad/expanders address.
Keypad beeps when keys are pressed, but will not allow the user to arm or disarm, or enter the User Menu.	Two or more keypads are assigned to the same address.	Set each keypad on the system to a unique address.
Power LED is off.	AC/Battery is not connected.	Connect AC power and/or battery.
Overcurrent OVC LED turns Red	Too many devices attached to auxiliary.	Maximum current draw is 500 mA.
Wireless Green TX LED is off.	Wireless House Code is not programmed.	Program House Code in System Options.
Wireless Yellow RX LED never flashes.	Transmitters are not getting through to receiver.	Check transmitter serial numbers.
		Move transmitter closer.
		If XT30, replace 1100 series receiver.
Wireless Green TX and Yellow RX LEDs are both on steady	Panel is reset.	Remove RESET jumper.
	Flash Load enabled	Remove LOAD jumper and reset panel.
Keypad operates intermittently, keystrokes may be missed, or display does not update consistently.	Wire length may exceed maximum, resulting in poor data performance.	Wire length can be reduced or a heavier gauge used.
		A power supply can be added near the keypad. See LT-2031, LX-Bus/Keypad Bus Wiring Application Note for more information.


#### 27.2 Common LCD Keypad Displays

Listed below are several keypad messages you may see on the display. Follow the instructions in the Possible Solutions column to correct the problem.


Message	Meaning	Possible Solutions
INVALID CODE	The user code entered is not recognized by the system.	Check the user code and try again.
CLOSING TIME	The system was not armed at its scheduled closing time.	Users still on the premise should arm the system or extend the schedule to a later time.
AC TROUBLE	The system AC is low or missing.	Check that the AC connections are good from the transformer.
BATTERY TROUBLE	The System battery is either low or missing.	Check to see that battery and connections are good.
SYSTEM BUSY	The system is performing another task with a higher priority or is being Remote Programmed.	Wait a few moments for the system to complete the task. Make sure the RESET jumper is not on the panel. If the message displays for several minutes, the keypad is not receiving polling from the panel.
TRANSMIT FAIL	The panel has attempted to communicate with the central station multiple times and has not succeeded.	Verify your communication type, account number, and phone number. Make sure the telephone line is connected and working properly.

# Wiring Diagrams

## 28.1 Multiple Indicating Circuit Modules Installation

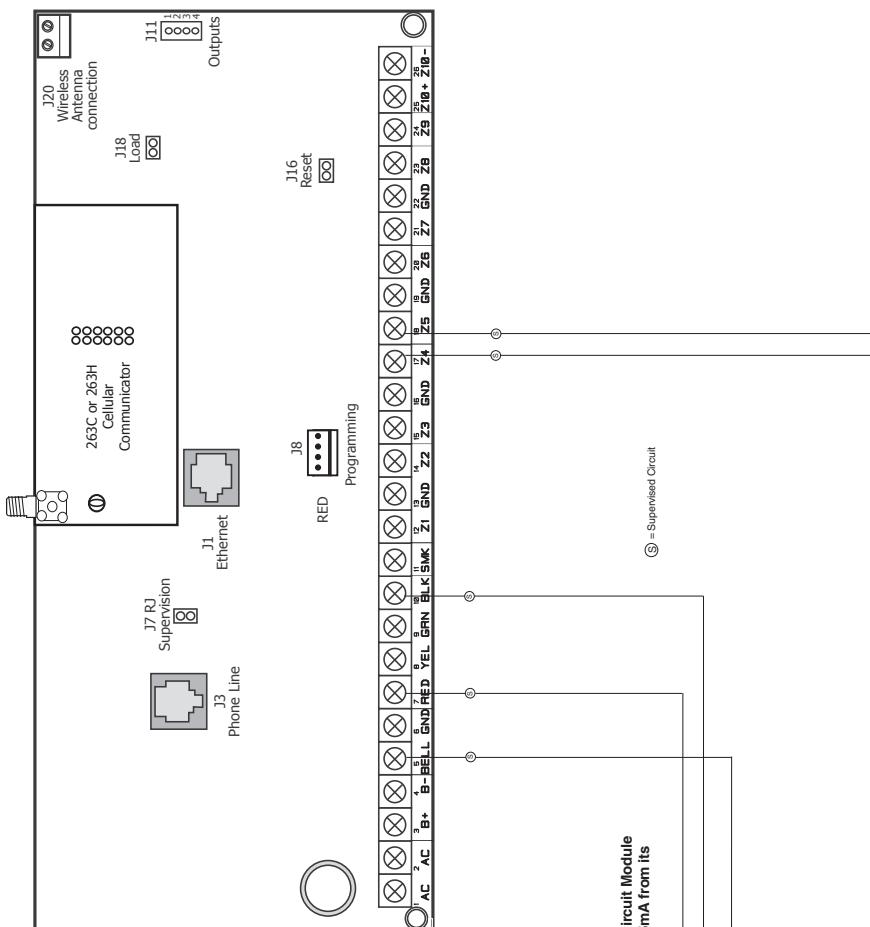


The Auxiliary Power Supply and Indicating Circuit Module trouble contact zone must be programmed as a Supervisory Type zone and must be selected for display in the keypad status list.

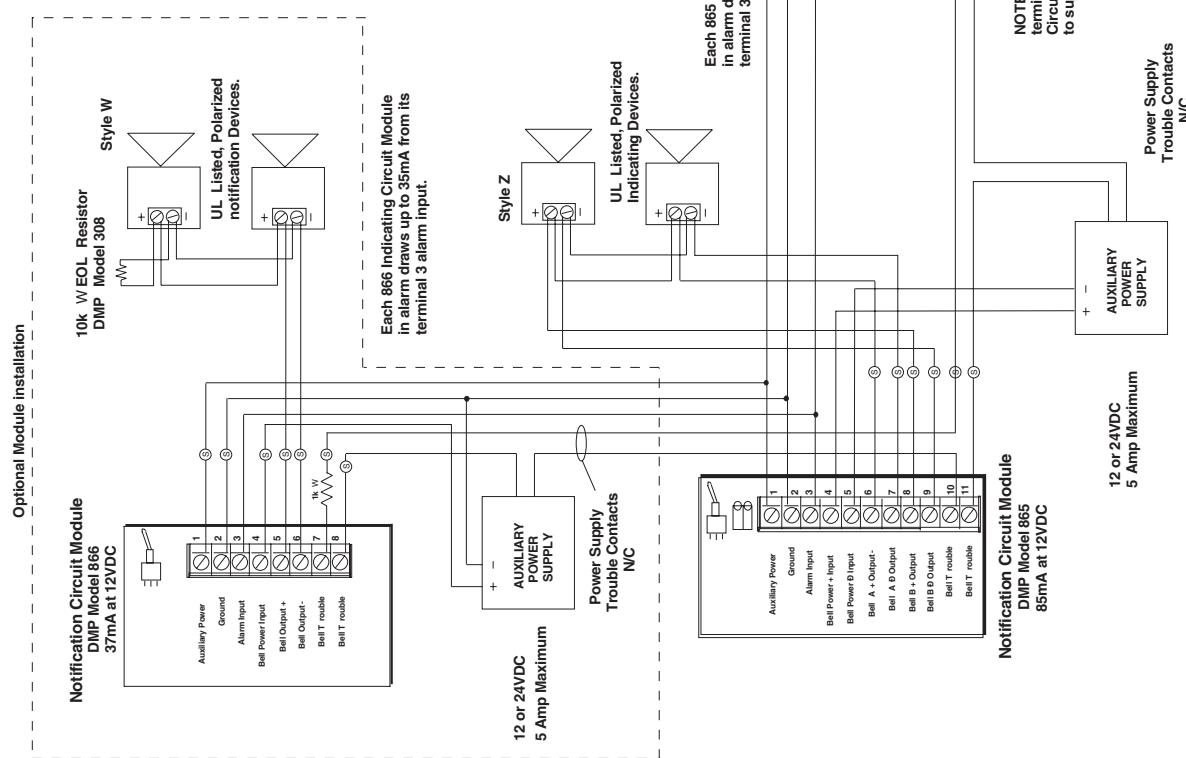

# WIRING DIAGRAMS

## 28.2 System Sensor 2-Wire Smoke Detectors

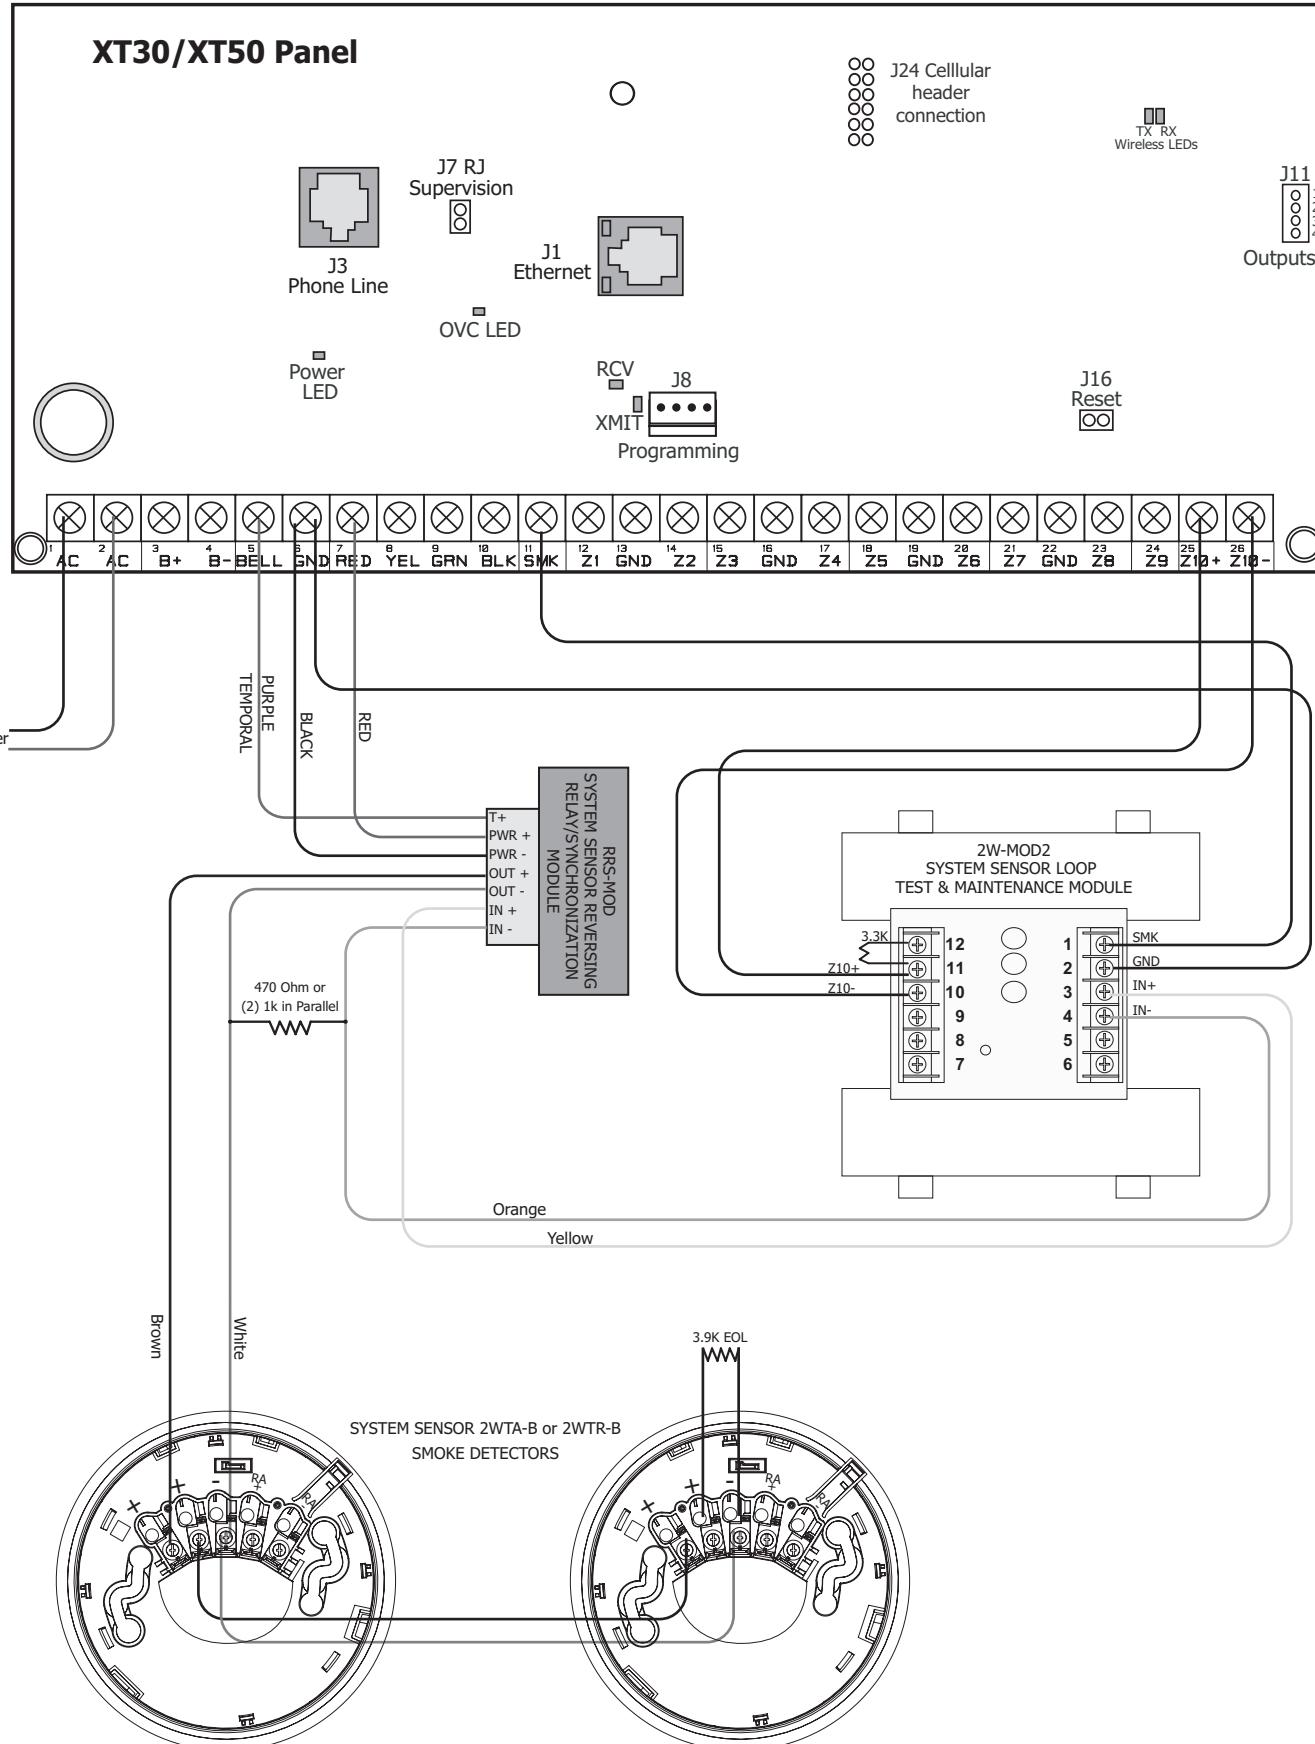

## Revisions to This Document

This section explains the changes that were made to this document during this revision. This section lists the version, section number with heading, and a quick summary of the change.

Ver.	Section Number and Heading	Summary of Changes
1.15	3.3 Accessory Devices 6.7 Standby Battery Calculations 18.1 Wi-Fi Connection	Added 1144-D, 1148, and 763 Added 763 to table, Built-in Cellular changed to Modular New Section
1.14	3.3 Accessory Devices 6.7 Standby Battery Calculations 17.1 Cellular Listings and Approvals	Removed 1126W, Removed 263G Added 860 to table, Removed 263G Updated cellular options Updated FCC, removed UL
1.13	1.7 Enclosure Specifications 24.4 Wireless External Contact	Added Construction Information Removed 1101, 1102, and 1105 section
1.12	3.3 Accessory Devices	Added 7872/7873 references
1.11	3.3 Accessory Devices 6.7 Standby Battery Calculations 17.1 Cellular	Added 263C/263G/263H information Added 263H information Added 263H references
1.10	1.2 Communication 4.1 Mounting the Enclosure 6.7 Standby Battery Calculations 15.1 Reset Header J16 Description 17.1 Cellular 28.1 Multiple Indicating Circuit...	Added modular cell communication Updated enclosure diagrams Added 263C reference Updated panel diagram Added 263C references Updated diagram



## Certifications

ANSI/SIA CP-01      False Alarm Reduction  
ANSI/UL 1023      Household Burglar  
ANSI/UL 985      Household Fire Warning  
ANSI/UL 1610      Central Station Burglar  
ANSI/UL 1635      Digital Burglar  
California State Fire Marshal (CSFM)  
FCC Part 15 Registration ID CCKPC0096  
FCC Part 68 Registration ID CCKAL00BXT50



800-641-4282

[www.dmp.com](http://www.dmp.com)

Designed, Engineered and  
Manufactured in Springfield, Missouri

INTRUSION • FIRE • ACCESS • NETWORKS

2500 North Partnership Boulevard

Springfield, Missouri 65803-8877

